

# Robobank

Cat. No. 60-1170

Your Robobank helps you save money! Store coins in this talking bank — it announces the amount you put in and keeps track of how much you have saved. The bank can even help you achieve a savings goal you set.

Its features include:

**Talking Bank** — tells you the value of each coin you insert and the total amount you have saved.

**Savings Goal** — lets you set a savings goal and sounds an alarm when it is achieved.

## INSTALLING BATTERIES

You need two AA batteries (not supplied) to power the bank. We recommend alkaline batteries, such as RadioShack Cat. No. 23-552/557.

1. Slide the switch on the back of the bank to **UNLOCK**.

Illustration

2. Turn Robobank's head counterclockwise, then lift it off the bank.

Illustration

3. Use a Phillips screwdriver to loosen the screw from the battery compartment.

Illustra-

4. Carefully insert the screwdriver's tip into the screw hole to lift up and remove the battery compartment's cover.

5. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

Illustration

### Cautions:

- Use only fresh batteries of the required size and recommended type.

- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

6. To close the cover, insert the cover's bottom tabs into the compartment's slots first. Then tighten the screw to secure it.

Illustration

7. Replace Robobank's head and turn it clockwise until it locks.
8. Slide the switch on the back of the bank to **LOCK** to secure the head to the body.

If the bank does not work properly, the display dims, or the sound weakens, replace the batteries with fresh ones.



### **Cautions:**

- Dispose of old batteries properly; do not bury or burn them.
- If the bank will not be used for a long time, remove the batteries.

Each time you put a coin in the slot, the bank flashes its red lights, shows the value of the coin, and announces the amount you put in. The bank then shows your total savings.

To have Robobank announce your total savings, press the middle button.

## **USING THE TALKING BANK**

Start your savings by putting quarters, nickels, dimes and pennies into the coin slot (half-dollars and silver dollars are too big for Robobank).

Illustration

Illustra-

The bank says, "You now have [amount]."

### **Notes:**

- Always keep the bank upright to prevent coins from jamming.
- Be sure to put in the coins one at a time, so the bank calculates the correct amount.

- If the display freezes, remove the batteries and put them in again. When you do this, Robobank's memory is erased and the savings amount resets to 0. To get an accurate savings amount, you must also remove the coins (see "Withdrawing from the Bank") and re-insert them into the slot.
- 5. To reset the savings amount to \$0.00, hold down **RESET** for about 2 seconds until the red lights flash. The bank says, "Fill me up."

Illustration

## Withdrawing from the Bank

1. Slide the switch on the back of the bank to **UNLOCK**.
2. Turn Robobank's head counterclockwise, then lift it off the bank and take out the coins.
3. Replace Robobank's head and turn it clockwise until it locks in place.
4. Slide the switch on the back of the bank to **LOCK**.

## Setting a Savings Goal

If you are trying to save a certain amount of money, you can use the talking bank to help you set a savings goal and monitor your savings.

1. Hold down **TARGET** for about 2 seconds until the red lights flash and \$---\_\_ appears.

Illustration

2. Set your goal by repeatedly pressing the middle button within about 10 seconds. Each press increases the amount by \$10. The amount appears on the display.

**Notes:**

- The minimum amount for the savings goal is \$10, and the maximum is \$990.
- To reset your goal, press **RESET** within about 10 seconds. The display returns to \$---\_\_.
- If the total amount you have saved appears before you press **RESET**, hold down **TARGET** for about 2 seconds until the goal amount flashes. Then press **RESET**. The display returns to \$---\_\_.

3. Press **TARGET** to store your goal in the bank's memory.

When you reach your savings goal, the red lights flash, **FULL** appears, and an alarm sounds for about 15 seconds to congratulate you.

**Notes:**

- You can press **TARGET** or **RESET** to silence the alarm immediately.
- If you do not withdraw from the bank, **FULL** appears each time you put in a coin after you reach your goal, and the alarm sounds. To stop this, hold down **TARGET** for about 2 seconds. When the savings goal appears, press **RESET** to reset the bank to \$---\_\_, or set a new savings goal for yourself. Then press **TARGET** to store the setting.



 
 
---

## MAINTENANCE

To enjoy Robobank for a long time:

- Keep the bank dry. If it gets wet, wipe it dry immediately.
- Use and store the bank only in normal temperature environments.
- Keep the bank away from dust and dirt.
- Handle the bank gently and carefully. Don't drop it.
- Wipe the bank with a damp cloth occasionally to keep it looking new.


Modifying or tampering with the bank's internal components can cause a malfunction and might invalidate its warranty. If your bank is not performing as it should, take it to your local RadioShack store for assistance.






**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

8A7

    Printed in Hong Kong






**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

**8A7**

 **Printed in Hong Kong**



### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

8A7

Printed in Hong Kong